



Scan Code for Tech Support

Manufacturer Recommended Paint Spray Booth Maintenance Schedule*

Call Garmat Certified Service Tech Trained personnel

Spray Booth Maintenance	Daily	Weekly	Quarterly	Semi-Annual	Annual	As Required
Clean / wipe down air hoses	•					
Vacuum interior of spray booth <i>(Place vacuum outside of booth , dry paint can cause sparking – see Painter Safety Guidelines)</i>		•				
Wipe interior of spray booth walls		•				
Replace Exhaust Filters (or every 40 hours)		•				
Clean light fixture glass			•			
Vacuum pit and tunnel / towers <i>(Place vacuum outside of booth , dry paint can cause sparking – see Painter Safety Guidelines)</i>			•			
Clean and remove overspray from floor			•			
Check motor belts			•			
Clean/Pressure Wash floor grates <i>(Outside of Booth)</i>			•			
Inspect door seals (replace when required)			•			
Service airflow switches / clean and adjust <i>(Call Authorized Service Tech)</i>			•			
Lubricate door hinges				•		
Lubricate blower shaft bearings				•		
Calibrate booth pressure balancing gauge <i>(Call Authorized Service Tech)</i>				•		
Inspect fire suppression system <i>(Call Authorized Service Tech)</i>				•		
Check and tighten all electrical connections <i>(Call Authorized Service Tech)</i>					•	
Clean light tubes					•	
Check light fixture glass seals					•	
Clean inside of all light fixtures and glass					•	
Clean exhaust stack, dampers and stackhead					•	
Clean main exhaust blower / fan <i>(Call Authorized Service Tech)</i>					•	
Burner system tune-up <i>(start-up procedure/cleaning)(Call Authorized Service Tech)</i>					•	
Clean upper plenum					•	
Lubricate motors					•	
Check Air Balance					•	
Replace Intake Filters (every 1000 hours)					•	
Check/Adjust Compressed Air System					•	
Bulbs – Check and Replace <i>(Call Authorized Service Tech)</i>						•
Door seal / gasket replacement						•
Door hinge white nylon bushing inspection						•

*This schedule assumes 40 hours of production time per week, it is also recommended that only trained personnel attempt the tasks as specified.

Although this information is set forth in good faith and believed to be accurate, Garmat, USA LLC nor its Distributors makes any representation or warranty the accuracy thereof. Information is supplied on the condition that the user of the Maintenance schedule will make their own determination as to the suitability for their purposes prior to its use. The user of this schedule must review and modify as necessary the suggested material from the maintenance schedule and apply to their particular circumstances. In no event will Garmat, USA LLC nor its Distributors be responsible for damages of any kind resulting from the use or reliance upon information or the policies, material, products, systems, or applications to which this information refers to be construed as a recommendation or requirement to use any policy, material, product, process system or application and neither Garmat, nor its distributors makes any representation or warranty express or implied. NO REPRESENTATION OR WARRANTY, EITHER EXPRESSED OR IMPLIED OF FITNESS FOR A PARTICULAR PURPOSE IS MADE HEREUNDER WITH RESPECT TO INFORMATION OR THE POLICIES, MATERIAL, PRODUCTS, SYSTEMS, OR APPLICATION TO WHICH THE INFORMATION REFERS. In addition, to an notwithstanding the above, in no event shall Garmat, USA LLC nor its Distributors be liable for any consequential or special damages or for any loss of profits incurred by the user or any third party in connection with or arising out of use of the maintenance schedule. It is recommended that only authorized and trained personnel perform the tasks as specified.